

Master Flash® Standard




Select an appropriate Master
Flash® Standard with a pipe range
that goes below and beyond
fitting. if necessary, use the lines
clearly shown on the flashing to
trim an opening 20% - 30%
smaller than pipe diameter.

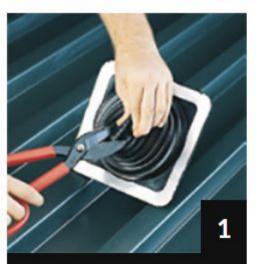


Slide the Master Flash® down the pipe, using a non-petroleum-based lubricant to ease installation.

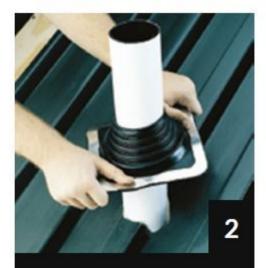

Press Master Flash® down, bending it to conform to roof profile or roof irregularities. A blunt tool will help to form flashing to tight roof angles.

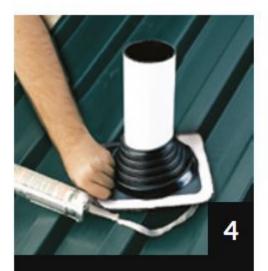

Apply sealant between the base of the flashing and the roof.

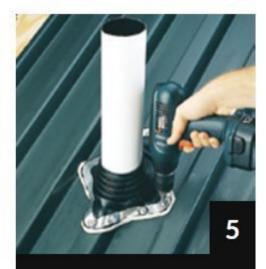

Use fasteners to complete sealing. For a secure installation, fastener spacing must not exceed 1.5" (38 mm).